

## TO LOAD ROLL



**1**  
To open the **label roll holder (A)**, pull upwards using the hole provided.



**2**  
To open the **base plate (G)**, pull down using **rounded end of the base plate (H)**.

**3**  
Open the **inner base plate (L)**. Insert the **label roll** into the holder.



Slide the labels through the machine with the labels facing upwards.

Close the **label roll holder (A)**.



**5**  
Pull the labels through the machine, about 10 cms. Close the **inner base plate (L)** and then the **outer base plate (G)**, keeping the labels central, as shown.

## PRINT-HEAD ADJUSTMENT



To adjust the print on the labels, slacken the **head screws (E)** and move the **print head (D)** backwards or forwards. Then re-tighten the **screws (E)**.

**6**

## PRINTING SETTING



To locate the **indicator** on the band,

**7**  
move the **dial knob (C)** and select the required digit, then push it back into place.

## CHANGING INK ROLLER

To open the **ink roller holder (F)**, pull outwards.



**9**  
Replace the **ink roller** by pressing gently as indicated.

Cod. ISUP



**PUMA**



**TOTAL VIEW**

**A** Label Roll Cover  
**B** Label Roll  
**C** Knob  
**D** Print-Head  
**E** Screw for print head adjustment  
**F** Ink Roller Holder  
**G** Base Plate  
**H** Rounded end of base plate  
**L** Inner Base Plate  
**M** Handle