


Label Loading Instructions

Kendo 22P

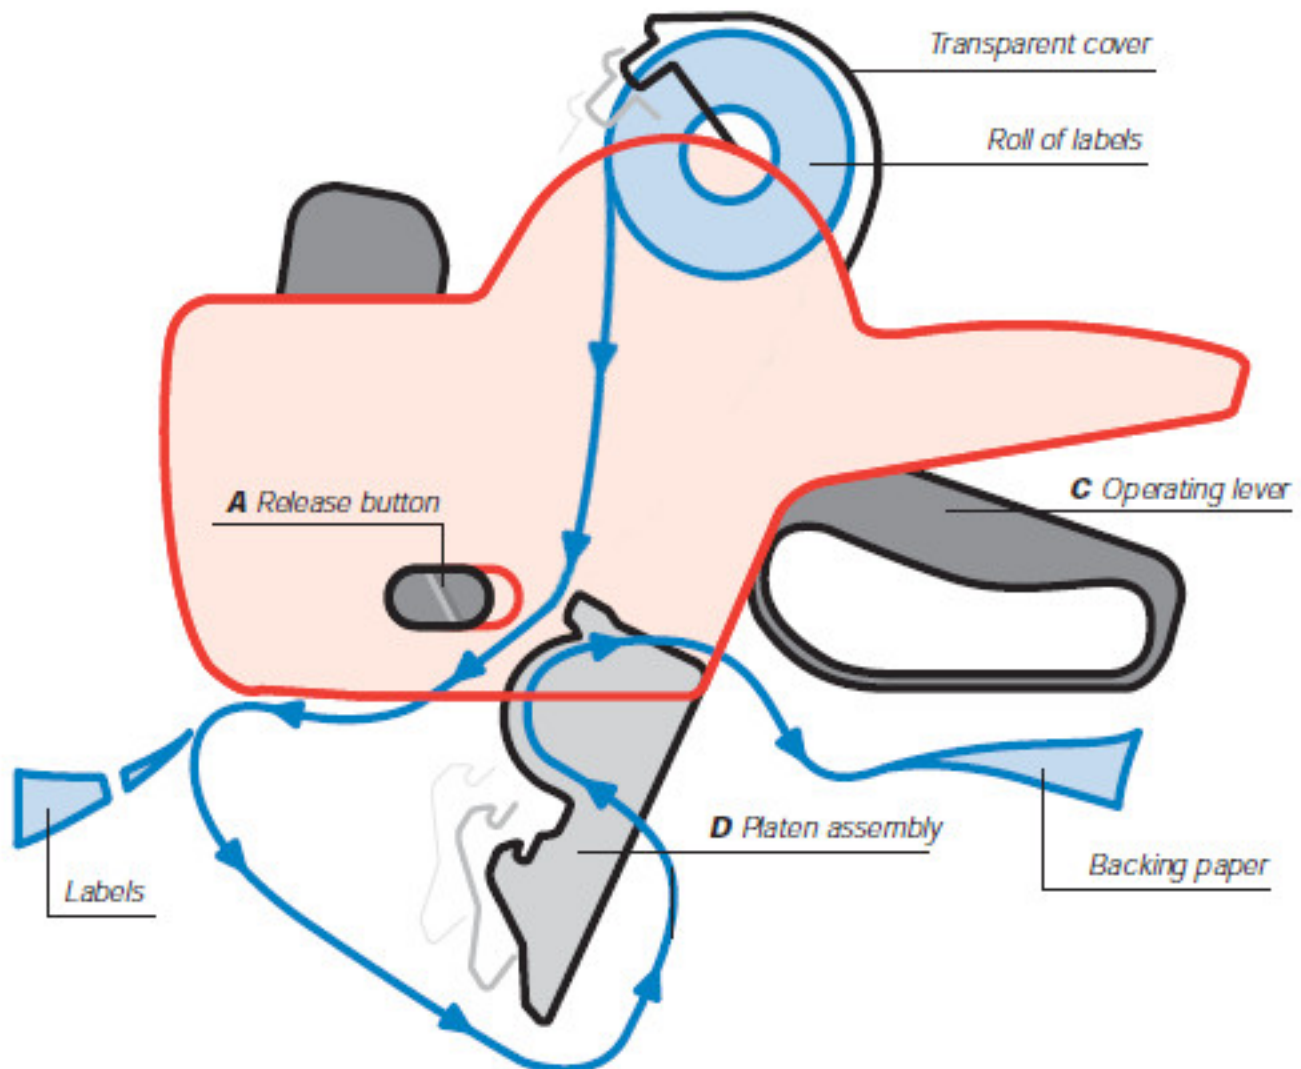

Lift transparent cover and place roll of labels into the machine.

Slide the release button (A) which allows the platen assembly (D) to drop down.

Feed end of roll of labels down above the platen assembly (D), and back into the platen assembly (an arrow indicates the appropriate slot).

Pull operating lever (C) a few times to feed roll through the machine.

Hold the end of the roll towards the operating lever and close the platen assembly (D).